

HTC VIVE BUSINESS+ ULTIMATE



| | |
|--------------|---|
| Cena celkem: | 16 020 Kč (bez DPH: 13 239 Kč) |
| Běžná cena: | 17 622 Kč |
| Ušetříte: | 1 602 Kč |
| Kód zboží: | VRHTC0029 |
| Part No.: | 69HVABMSH36M01-00 |
| Záruka: | 12 měs. IČO / 24 měs. EU |
| Stav: | Nové zboží |

Popis

HTC Business+ Ultimate

HTC VIVE Business+ je řešení softwaru a služeb pro správu **HTC VIVE Focus 3**. Přizpůsobte si samostatné náhlavní soupravy VR tak, aby vyhovovaly vašim firemním potřebám. Licence je platná 3 roky. Verze Ultimate nabízí **5 GB cloudového úložiště** pro sdílení map, vzdálenou instalaci obsahu a distribuci do skupin zařízení po síti (soubory .apk a .obb) či vlastní animace při spouštění zařízení.

Licence je určena **pro komerční použití**. VIVE Business+ nepodporuje licencovaný obsah z VIVE Business AppStore nebo VIVEPORT.

Správa zařízení

Rychle a snadno zaregistrujte náhlavní soupravy pomocí naskenování QR kódu, aktualizujte nastavení/konfigurace hardwaru a spravujte svá zařízení na dálku.

Správa obsahu

Nahrávejte vlastní obsah, spravujte knihovnu a instalujte aplikace do všech náhlavních souprav VIVE Focus 3 odkudkoli.

Vzdálená správa obsahu

Přístup k obsahu a jeho správa v rámci organizace není nikdy jednoduchá. VIVE Business+ umožňuje vzdáleně nahrávat a spravovat všechny aplikace a verze v cloudu. Nahrávejte vlastní soubory .apk a .obb. Centrálně spravujte a spolehlivě škálujte svá nasazení.

Správa uživatelů

Přidejte uživatele a nastavte oprávnění pro role správce, editora či diváka. Vytvořte více organizací pro samostatné týmy. Udržujte kontrolu nad všemi na jednom místě.

Správa skupin

Vytvořte skupinu pro svá zařízení a rychle a efektivně nasazujte aktualizace nebo aplikujte přizpůsobitelná nastavení. Změňte skupinová nastavení ROM, aplikací, map a zobrazte okamžité aktualizace ve všech seskupených zařízeních.

Pokročilé funkce

Poskytněte uživatelům lepší zážitky díky přizpůsobitelným možnostem uživatelského rozhraní a režimům sledování VIVE Location-Based Software Suite (LBSS).

Vzdálené monitorování a ovládání zařízení

Sledujte stav baterie náhlavní soupravy a ovladače, stav Wi-Fi a další důležité údaje. Mějte lepší kontrolu nad svými zařízeními odkudkoli. Vzdáleně restartujte, vypínejte a resetujte náhlavní soupravy do továrního nastavení.

Funkce a vlastnosti:

VIVE BUSINESS+ FEATURES

| | FEATURES | DESCRIPTION | STANDARD | PRO | ULTIMATE | NOTES |
|-----------------------------------|---|--|--------------|-----|----------|------------|
| User Admin | Overview Dashboard | Organization enrolled device lists, available seats, expiration... etc. | • | • | • | |
| | Role based User Management | Admin, Editors, Viewer roles | • | • | • | |
| | Member Management | Add, delete, and assign user accounts to organizations | • | • | • | |
| | Permission Management | Admin privileges for modifying user permissions | • | • | • | |
| | Cloud Storage | Storage for configurations, maps, and custom content files for remote installation | | 1GB | 5GB | per device |
| | Code Redemption | Organization creation and seats redemption | • | • | • | |
| Device Management | NEW QR Code Enrollment | QR Code initiated device setup and enrollment for the VIVE Focus 3 | • | • | • | |
| | NEW Standard Device Status | Device battery level, sync time... etc. dashboard | • | • | • | |
| | NEW Batch Configuration | Batch configuration for device groups | • | • | • | |
| | NEW Device Groups | Device grouping and group management features | • | • | • | |
| | NEW Issue Report/Tracking | Device logging on VBMS and issue ticketing | • | • | • | |
| | NEW Remote Device Management | Remote device reboot, shutdown, and wipe... etc. | | • | • | |
| | NEW Advanced Device Status | Device storage, content list... etc. | | • | • | |
| | NEW Remote Content Management & Distribution | Remote content installation and distribution to device groups over network (APK and OBB files) | | | • | |
| | Customized Boot Screen | Custom device boot up animation | | | • | |
| System Updates | Offline Device ROM Update | Update to ROM manually using SD card | • | • | • | |
| | NEW Device management and FOTA Assignment | System version management, supporting device groups and support force updates. | • | • | • | |
| | NEW ROM Update via SD Card | Automatically update to specific ROM version directly by SD card | | | • | |
| Advanced Tracking Features (LBSS) | Visual Odometry (VO) Tracking Mode | Access to VO Mode | NEW • | • | • | |
| | Immersive Customization | Disable default system UI elements (refer to batch configuration) | | • | • | |
| | LBE Configurations | Tracking mode selection and corresponding settings (refer to batch configuration) | | • | • | |
| | Map Sharing | Map sharing between HMDs for alignment | | • | • | |
| | Advanced Tracking Features | MBSL, MBSA, Drift Prevention Mode | | • | • | |



HTC PROPRIETY



BATCH CONFIGURATION SETTINGS

| | FEATURES | STANDARD | PRO | ULTIMATE |
|--|--|----------|-----|----------|
| General | System language | • | • | • |
| | Timezone | • | • | • |
| | Network time enabling | • | • | • |
| | Double click to show pass through | • | • | • |
| | Allow BT | • | • | • |
| | Hand tracking enable/disable | • | • | • |
| | Show/hide Vive Sync | • | • | • |
| Wi-Fi settings | Wi-Fi certificate | • | • | • |
| | Wi-Fi setup | • | • | • |
| | VPN certificate | • | • | • |
| | VPN setup | • | • | • |
| Device settings | Boundary color | • | • | • |
| | Boundary transparent | • | • | • |
| | Show pass through automatically when out of boundary | • | • | • |
| | Always show floor bound | • | • | • |
| | Power frequency | • | • | • |
| | Allow recording and casting | • | • | • |
| | USB debugging | • | • | • |
| | Period to enter sleep mode | • | • | • |
| | Hide pre-loaded content -> VIVE Sync | • | • | • |
| | Hide pre-loaded content -> Firefox Reality | • | • | • |
| Hide pre-loaded content -> VIVE Business Streaming | • | • | • | |
| Kiosk mode | Kiosk mod - select content | • | • | • |
| | Kiosk mod - password | • | • | • |
| | Kiosk mod - Activate kiosk mode | • | • | • |
| | Kiosk mod - network mode (any, pre-set, offline) | • | • | • |
| | Kiosk mod - interaction mode | • | • | • |
| | Kiosk mod - Show/hide tutorial/opening video/wearing guide | • | • | • |
| | Kiosk mod - Allow BT connection | • | • | • |
| | Kiosk mod - Allow casting | • | • | • |
| | Kiosk mod - Allow screenshot and recording | • | • | • |
| | Kiosk mod - Allow USB translation | • | • | • |
| UI Related | Disable controller pairing and the UI after initial setup | | | • |
| | Disable Vive menu on the R controller and HMD button | | | • |
| | Disable Function Menu | | | • |
| | Disable USB connection dialog | | | • |
| | Disable Volume adjustment Bar | | | • |
| | to consent volume warning dialog by volume up key | | | • |
| | Disable Volume safety notification | | | • |
| | Disable low battery notification | | | • |
| | Disable IPD adjustment overlay | | | • |
| | Skip GOBE | | | • |
| Customization | Customized boot logo | | | • |
| | Customized boot animation | | | • |
| | Customized boot duration (logo & animation) | | | • |
| | To Hide tabs from MainNav | | | • |
| Tracking Features | enable System firmware update management | | | • |
| | Disable content transition | | | • |
| | Disable shutdown screen image | | | • |
| | enable Lost tracking event integration | | | • |
| | Disable lost tracking animation | | | • |
| | Disable lost tracking black background | | | • |
| | Marker-based location sharing (VO mode only) | | | • |
| | enable Marker-based drift prevention | | | • |
| | Disable Reset View function | | | • |
| | Support 1 controller 1 wrist tracker | | | • |
| Enable hand tracking as default | | | • | |
| HW Keys | Disable VIVE button on right controller | | | • |
| | Disable volume up/down buttons on HMD | | | • |
| | Disable Headset button on HMD | | | • |
| | Disable hand gesture "palm pinch" | | | • |
| | Pop up Vive menu by single click headset button | | | • |
| | enable 2 ways communication on wrist tracker | | | • |



HTC PROPRIETY



BUSINESS BUILDING BLOCKS

BUSINESS WARRANTY AND SERVICES

Business Warranty & Support 2 or 3 years

Enterprise-grade support and services to protect your investment.

Two (or 3-years) warranty, phone support and expedited repair



VIVE Advanced Device Management System –services

Standard Tier Included with BWS

New VIVE Advanced Device Management System features

- QR Code enrolment
- NEW Device Status
- NEW Group Management
- XR Elite 3rd Party MDM use



Pro Tier Optional (F3 only)

- Remote Device Management
- Advanced device status
- Focus 3 Location Based Software Suite



Ultimate Tier Coming Later (F3 only)

- Content management and delivery with more content storage
- Advanced features like deep API integration

